User Guide


Silent-Silo™ Acoustic Office Pod

 
Getting In and Out of Silent-Silo


Opening + Closing Sliding Door

Left-hand Door: Slide door to left until the door glide meets the stopper.

Right-hand Door: Slide door to right until the door glide meets the stopper.

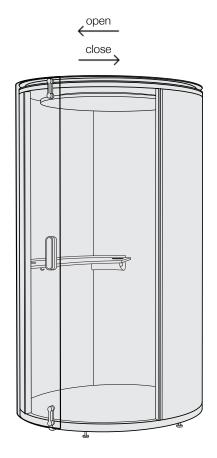



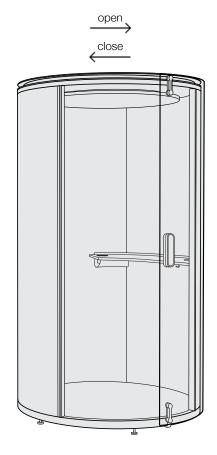

Right-hand Door (Door Slides Right to Open)

Cleaning the Door

Acrylic Cleaning + Polishing

General Cleaning: Using a microfiber cloth, wipe with a mild soap (such as Dawn) and water solution (1 teaspoon detergent to 1 quart lukewarm water).

Deep Cleaning + Polishing: Scratches may be polished with Novus No. 1 Plastic Clean and Shine. Reapply regularly to maintain the anti-static, smudge, and scratch-resistant properties.


Plug in Electrical + USB Cables

Outlet on Worksurface

- Slide the metal outlet cover away from the worksurface to open.
- 2 Plug devices into the electric and USB outlet.
- To close, slide back to completely cover outlet.




View Video of

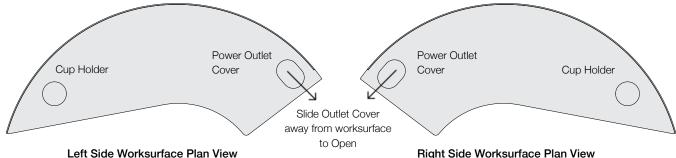

Dim the Lights (with Optional Dimmer)

Dimmer Switch on Worksurface

- The optional dimmer switch is the round blue-illuminated button located on the worksurface top. The initial brightness is 100% of the maximum brightness.
- To dim, touch and hold the button (time > 550ms) to initiate stepless dimming control. The brightness increases when touching and holding, and stays at the level when stop holding. When holding more than 3 seconds, the brightness reaches and stays at maximum level. The brightness decreases when touching and holding again, and stays at the level when stop holding. When holding more than 3 seconds, the brightness reaches and stays at minimum level. Continue to cycle.

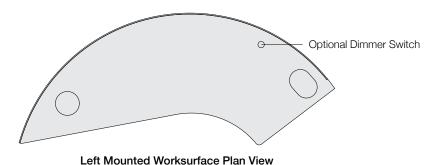

Clean the Worksurface

Wipe surface with cloth dampened with non-wax containing polish or mild detergent solution.

Adjust the Light + Fan Occupancy Duration

Light + Fan Sensor

- 1 The light and ventilation fan automatically switch on with the occupancy sensor once an occupant enters Silent-Silo.
- 2 Once the occupant leaves, the light and fan will remain on for five minutes and then switch off.
- Refer to the manufacturer's operation manual to make changes to or troubleshoot the light + fan sensor.

Download Operation Manual



For additional instructions or troubleshooting tips for Silent-Silo, please contact Spinneybeck | FilzFelt Customer Service at info@spinneybeck.com or 800.482.7777.