

Figure No. 3 Installation Instructions

These installation recommendations consist of common-sense practices for cork tile and similar products. Installers should rely upon their own professional experience and understanding of their unique requirements to be the best guide to a successful installation.

Each order of Figure No. 3 wall covering is divided into approximately 50% each of two different pattern elements: A and B. Each tile is marked with a distinguishing color stripe on the back of the tile: A = red and B = green. The pattern elements are not interchangeable and both are necessary to create the correct pattern repeat. Please consult the standard pattern graphic below for the correct orientation and placement of each element. Other configurations are possible; however, the standard pattern is the repeat for which this product was designed.


Tools Needed

- 1/8" v-notch trowel
- Bar level or laser level
- Carpenter's square
- Heavy-duty construction adhesive (such as Liquid Nails LN-903, LN-FRP, and Loctite Express)
- Utility knife (such as Olfa or similar) with extra blades or Table saw with fine tooth blade
- Weighted roller


It is recommended that a cleaning solution be available to remove any adhesive that transfers onto the face of the wool felt. Adhesive must be removed with the solution before it has dried.

Components Provided

Tiles (approximately 50% of each)




End-of-Run Trim (as ordered—refer to Step 13)



Installation Instructions

- 1 Handle the Tiles keeping the felt faces together, and the substrate faces together to reduce the possibility of damage during installation.
- 2 Inspect the product. Subtle color and texture variations even within the same Tile are a normal aspect of this product. It is advisable to inspect for these irregularities and plan the layout accordingly, making sure to disperse any minor color variation evenly. In the case of product defect or damage in transit, FilzFelt must be notified within five (5) business days. FilzFelt cannot accept a return or warranty claim on any product that has been installed.
- 3 Allow Tiles to acclimate to the installation environment. After the shipping crates have been opened, the Tiles should be laid out individually on the floor for at least forty-eight (48) hours. Variations in temperature and humidity may affect the size and Tiles may be trimmed with a carpenter's square and sharp utility knife or fine tooth blade and table saw to correct any irregularity or discrepancy between Tiles.
- 4 While the Tiles are becoming acclimatized, clean the work surface. It should be smooth, dry, and dust-free to allow the best possible adhesion. A Level 4 Finish wall preparation is sufficient.
- 5 Use the bar level or laser level to determine a base level line for the first horizontal course at the bottom. This line will set the level for the entire installation so it is most important to get this right.
- 6 Tiles are applied according to the standard pattern graphic. Plan out the pattern before adhering the Tiles and make any adjustments to ensure any minor color variation is dispersed throughout the wall.

Standard Pattern

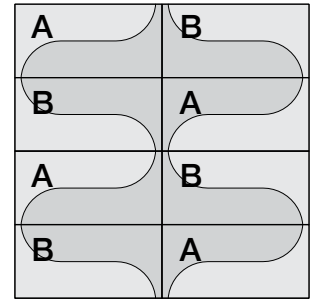

- 7 Prepare a cleaning solution to remove any adhesive that transfers onto the face of the wool felt. A mild enzyme-based detergent (such as Tide Free) is recommended. Create a dilute solution by adding three (3) parts water to one (1) part detergent in a clean container. To remove adhesive before it has dried, use a clean paper towel to gently blot the detergent into area. Press and release, press and release. Using a separate container of clear water, use clean, moist paper towels to blot more water into the stain. Press and release, press and release. Finish by blotting firmly with clean, dry paper towels until the area is nearly dry. **IMPORTANT:** Adhesive must be removed before dry. Avoid aggressive rubbing, as this can continue the felting process and change the surface appearance of the felt.
- 8 Start installation at the bottom left of the wall. Apply heavy-duty construction adhesive to the wall using a 1/8" v-notch trowel. The adhesive should be generously applied to the wall using a roller but not so thickly that the level line is obscured. If you are using a laser level, this will not be an issue. Apply the first four (4) Tiles in sequence edge-to-edge, ensuring that the edges are properly butted up against one another, and all are perfectly level. Gently roll over the Tiles with the weighted roller, taking care not to smear any adhesive. Finally, using clean fingers, press against the Tile to ensure the best adhesion, and then check again for level.
- 9 Repeat the above steps until the first course is completed.
- 10 To cut any custom Tile sizes or to cut device cut-outs, use a sharp utility knife and carpenter's square. Make a first pass with light pressure to score the felt. Next, make one (1) to two (2) additional passes using firm pressure and making sure the blade is plumb. **IMPORTANT:** Always use a sharp blade and change blades frequently.

Devices may then be either wall-mounted or panel-mounted as specified by the client. All cutting and finishing of the cut-outs and installation of electrical devices are the responsibility of the purchaser.
- 11 Allow the first row to set up for approximately twenty (20) minutes before installing the row above as the Tiles may slip.
- 12 Move up to the next row and follow the above procedure, ensuring that the Tiles are butted firmly against one another. Continue checking level throughout the installation. Repeat until complete.
- 13 If the installation will end at an outside corner or in the middle of a wall, End-of-Run Trim may be ordered to conceal the exposed cork edge. This material will match the color of the order or will be another color as specified by the designer. End-of-Run Trim should be installed first using a level in combination with a ledger board to provide the straightest installation. After End-of-Run Trim is installed, the installation can proceed as directed. To permanently apply this material, a bead of silicone adhesive is recommended. A hot-melt adhesive or heavy-duty construction adhesive may also be applied in a single bead down the center of each section. The ends of the trim are finish cut and will butt together to create a seamless look.

Cleaning Instructions

Like any natural fiber, a minimal approach should always be taken to clean wool felt since the cleaning method could potentially do more harm than the soiling or stain. The cleaning approach should be (1) dust with a lint roller, (2) vacuum with a clean, soft brush, (3) clean with water and mild detergent, and (4) clean with chemical spot remover. **IMPORTANT:** Always test any cleaning method in an inconspicuous area before attempting general cleaning.

For complete instructions, refer to the Product Maintenance + Cleaning Guide at filzfelt.com/cleaning-guide.