

# ARO Attach Installation Instructions

## Wrap Screen Configuration


ARO Attach (in Wrap Screen configuration) is a desk-mounted screen composed of a panel with folding side panels and mounting hardware which are shipped separately and assembled on site. These installation recommendations consist of common-sense practices for standard desk screen installation. Installers should rely upon their own professional experience and understanding of their unique requirements to be the best guide to a successful installation. Two installers are recommended to support the panel while installing.

### Tools Needed

- 1 Bar level
- 2 Drill with bits

### Components Provided

Screen (size and rib profile as ordered)

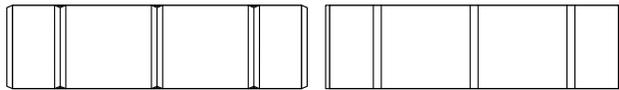

Triangle Rib

Rectangle Rib

Mounting Hardware (as ordered)



Flush Mount Brackets

Cord Drop Mount Brackets



7/8" Stainless Steel Phillips Flat Head Screws  
2 per Flush Mount Bracket  
4 per Cord Drop Bracket

1" Stainless Steel Phillips Flat Head Screws  
4 per Flush Mount Bracket  
4 per Cord Drop Bracket



### Installation Instructions

- 1 Handle the screens individually and with clean hands to reduce the possibility of damage during installation.
- 2 Inspect the material. Subtle color and texture variations even within the same panel are a normal aspect of this product. It is advisable to inspect for these irregularities and plan the layout accordingly making sure to evenly disperse any minor color variation. In the case of product defect or damage in transit, FilzFelt must be notified within five (5) business days. Please note that FilzFelt cannot accept a return or warranty claim on any material that has been installed.
- 3 Allow components to acclimate to the installation environment. After the shipping crates have been opened, the panels should be laid out individually on the floor for at least forty-eight (48) hours.
- 4 Bracket for Cord Drop Mount requires 3 1/2" (8.8 cm) of unobstructed area on the underside of the desk—Cord Drop Mount provides 1 1/4" (3.1 cm) gap for wire management. Flush Mount requires 6 3/8" (16.2 cm) of unobstructed area on the underside of the desk.
- 5 Secure brackets to the screen using 7/8" stainless steel Phillips flat head screws included per bracket (2) screws per Flush Mount Bracket or (4) screws per Cord Drop Bracket. Holes will be pre-drilled into the screen at the support ribs; height placement of holes will be as specified.
- 6 Measure bracket locations on the screen; transfer measurements to desk undersurface.
- 7 Start by installing the back panel. Support the screen in place, checking it is centered on the work surface. Check brackets align with measurements on the desk undersurface. Drill pilot holes.
- 8 Screw back brackets into the underside of the desk using the (4) 1" stainless steel Phillips flat head screws included per bracket. Check the panel is level and secure.
- 9 Fold screen side panels into place. Screw side brackets into the underside of the desk as before. Check again that the panel is level and secure.

5

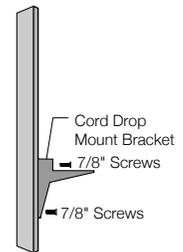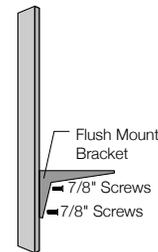

8-9

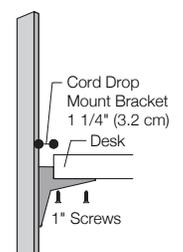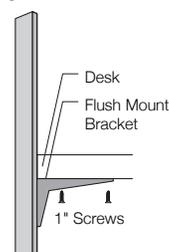

### Cleaning Instructions

Vacuum occasionally to remove general air-borne debris. Should soiling occur, spot clean with mild soap and lukewarm water.