

# Wall Panel Installation Instructions

## Akustika 10 Wall, Muro + Muro Plus


These installation recommendations consist of common-sense practices for installing wall panels and similar products. Installers should rely upon their own professional experience and understanding of their unique requirements to be the best guide to a successful installation.

### Tools Needed

- 1 Bar level or laser level
- 2 Chalk line
- 3 Tape Measure
- 4 Drill
- 5 Wall screw appropriate for wall type (not included)

### Components Provided

Panel(s) with Panel Z-Clips attached to back (size shown is diagramatic)

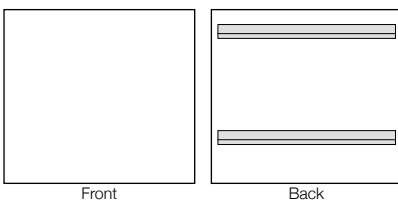

Wall Z-Clips in 6 ft (1.8 m) lengths (must be cut to size)



### Installation Instructions

- 1 Handle the panels individually and with clean hands to reduce the possibility of damage during installation.
- 2 Inspect the panels. In the case of product defect or damage in transit, Spinneybeck must be notified within five business days. Please note that Spinneybeck cannot accept a return or warranty claim on any material that has been installed.
- 3 Allow components to acclimate to the installation environment. After the shipping crates have been opened, the panels should be laid out individually on the floor for at least 48 hours.
- 4 While the panels are becoming acclimatized, clean the work surface. It should be smooth, dry, and dust free to allow the best possible installation. A Level 4 Finish wall preparation is sufficient.
- 5 Wall Z-Clips will be provided in 6 ft (1.8 m) sections. Cut Wall Z-Clips to length as needed to fit the installation width.
- 6 The Z-Clip hanging method is much like hanging a picture on the wall. The clips allow the panels to be easily lifted off or set on the wall. While the panel is on the floor with the back side of panel facing up, lay Wall Z-Clips into Panel Z-Clips.
- 7 Determine location of Wall Z-clips by first placing the Wall Z-Clip into the Panel Z-Clip (7a). Measure from the base of the Panel to the bottom edge of the Wall Z-Clip (7b). Transfer this measurement to the wall, measuring from the finished floor or overall level line.
- 8 Set laser level or snap chalk lines on wall at measured heights and ensure they are level.
- 9 Attach Wall Z-Clips with appropriate wall screws (not included) to wall with bottom aligned to laser level or chalk lines. Please note that it is recommended to screw into studs, blocking, or use appropriate anchors.
- 10 Place Panel on wall at least 3/4" (1.9 cm) higher than desired height and press firmly against wall. Slide panel down to engage Z-Clips. Check to be sure all Z-Clips are engaged.

